





FUXON

ALL AROUND YOUR BIKE...



Bedienungs- anleitung

User Instruction

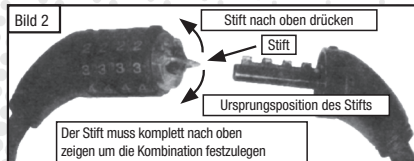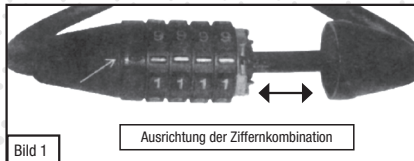

1. Richten Sie die Ziffernkombination wie auf Bild 1 dargestellt aus („----“)
2. Öffnen Sie das Schloss
3. Drücken Sie den Stift aus der Zahlenwalze nach oben (Bild 2)
4. Wählen Sie nun die gewünschte Zahlenkombination. Stellen Sie sicher, dass alle Zahlen auf der Walze auf der gleichen Höhe mit der Nut in der Zahlenwalze übereinstimmen.
5. Drücken Sie den Stift in die ursprüngliche Position zurück. Jetzt haben Sie Ihre Zahlenkombination festgelegt.

WICHTIG! Notieren Sie sich die Zahlenkombination! Wenn Sie einmal die Zahlenkombination festgelegt haben, ist keine Änderung mehr möglich. Händler oder Hersteller können Ihr Schloss nicht öffnen, wenn Sie Ihre Zahlenkombination verloren haben.

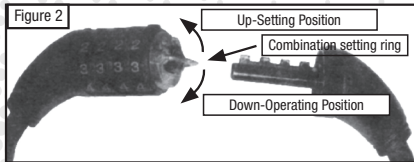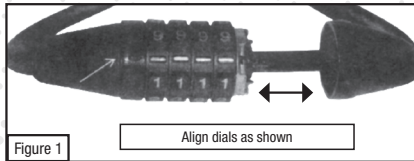

1. Align lock with current combination (factory setting is „----“) (Figure 1)
2. Pull open lock
3. Flip combination setting ring completely upwards to cover lock channel as shown in (Figure 2)
4. Reset each numbered dial to the desired combination.
Make sure each number lines up with the notch at left side of the case.
5. Flip setting ring back to it's original closed position.

Your new combination is now set

Be sure to write down the new number combination

Important! Once you set your combination, no other combination will work. Neither your local bike store nor the manufacturer can open your lock if the combination is lost.

